




Measuring Universal PerfectFit Frame

Outside recess fit / face fix to cabin wall

The frame should project at least 60mm each side of the recess from the edge of the wall to the outside of the Universal frame. (Recess measurement + 120mm)

- Measure and record the width 'W' and drop 'D' using the diagrams
- If there is a windowsill, measure from the top of the sill to the top of the recess and add 60mm, this is your 'D' measurement

Please note - this is the measuring method provided by the company who designed this type of blind. Be aware that the Universal frame is approximately 30mm wide and there will be some exposed wall (approx. 30mm) between the inside edge of the Universal frame and the edge of the recess. This gap is to provide a better light block and also provide some space for the blind to retract to when fully open.

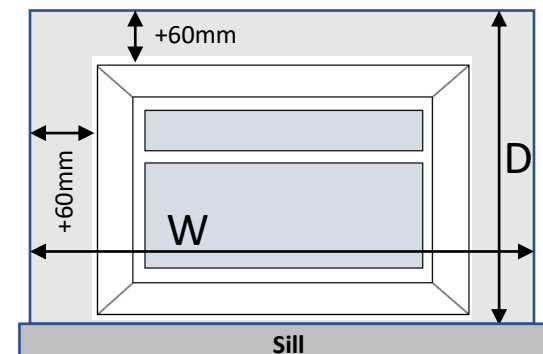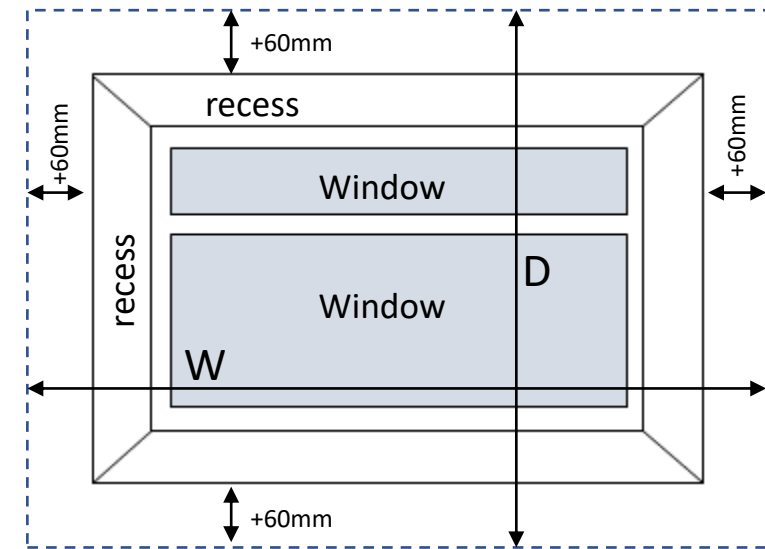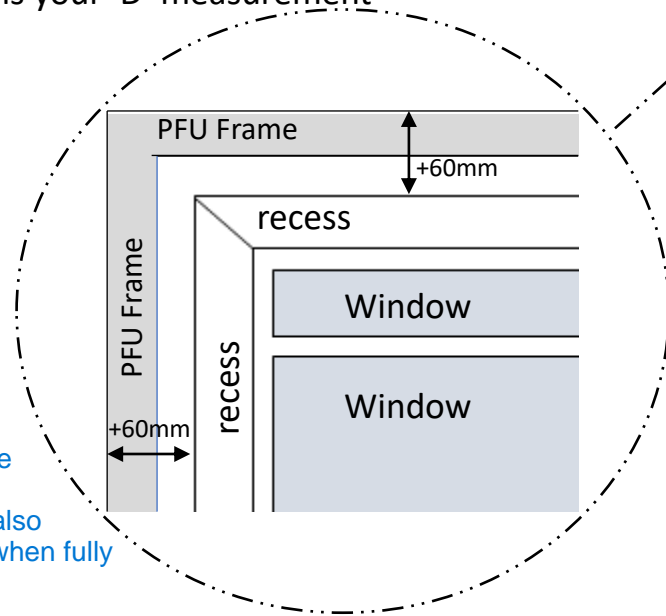

Window with sill