


# Measuring Universal PerfectFit Frame

## Recess fit

(The frame is to be fitted inside the window frame recess).

- Measure the width inside of the recess in several places, particularly at the top of the recess and record the smallest width.
- Measure inside drop of recess in several places and record the smallest drop.
- You now have the **width x drop** of the inside recess size.
- Enter these sizes as your **Exact measurements**.

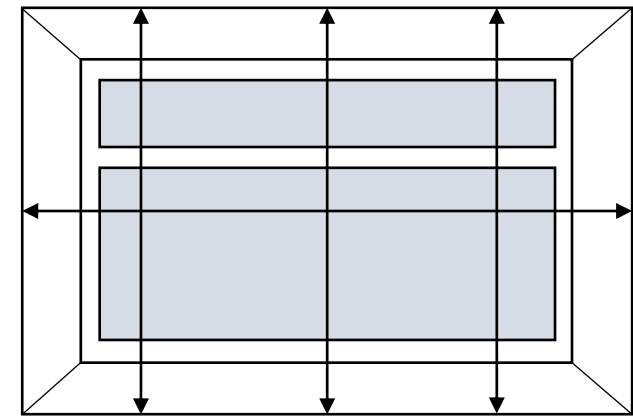

Inside recess