

Assembly of the Perfect Fit blind (Pleated hive style)




Carefully unwrap the blind. Take care not to scratch the blind if using a knife.



Lay out the blind onto a flat surface.

Unwind the blind cords and set out as shown.

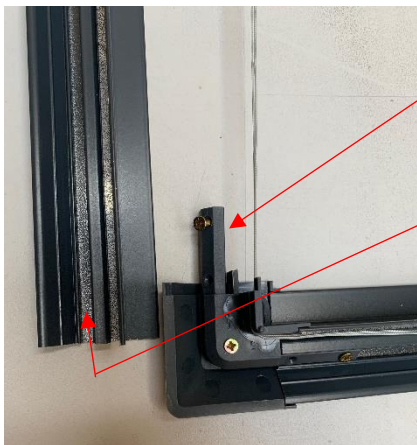

This picture shows the bottom left corner

This pushes into here



Complete for all 4 corners.

They may need a little persuasion, carefully use a small rubber mallet if required.

Screw down the little screws to lock the frame in position.

One



screw in each lug should be adequate.



At the bottom of the frame, connect the hook to the spring, this will put the required tension into the blind.



Push fit the operating handles into place.



Perfect Fit Blind clicked onto the Universal Frame.

