

# Fitting


## Slowrise Roller blind

The slowrise roller blinds come with two brackets, possibly three depending on the width.

This picture shows where the brackets are located on the head rail of the blind, approximately 5cm from each end of the blind. This picture is showing the side and back of one bracket.



Place another bracket approximately 5cm from the other end. When the brackets are in place, position the blind centrally and level, over the window and mark lightly with a pencil where the brackets will be. Release the brackets when you have marked the positions. This is very simple, just press the clear plastic tabs on the bracket upwards and tilt away from the blind.

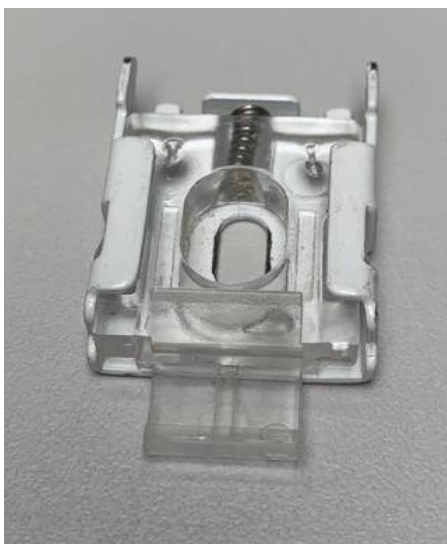

This picture shows the face of the bracket. The elongated hole in the bracket is there to take the screw that fixes the bracket to the wall. The clear plastic tab is to release the blind. At the top are two little hooks that the blind sits on.



Place the brackets on your marked lines and either pre drill or screw directly into place.

Noting how the bracket fits in the blind back bar. Place the top of the back bar channel onto the hooks (above) and then press upwards the two clear plastic tabs, and the blind will click into place. (Press the tabs again if you wish to remove the blind).



Make sure the fabric rolls from the back as this picture shows.

When you are satisfied that the blind is locked in you can centralise it by sliding the blind.



When the blind is central, mark where you want the blind to stop when in the down position. (align with the magnet attached to the bottom bar of the blind). Use the supplied screw to fix in place.

Where the fabric stops at the top of the blind can be adjusted by the white plastic screw in the end bracket of the blind (Right hand side when facing the blind) Use a screw driver, but be gentle as the screw can be damaged easily and you don't need to turn it very far. Turn clock wise and the bottom bar will move down, to raise the opposite.