


Measurement for inside a window recess

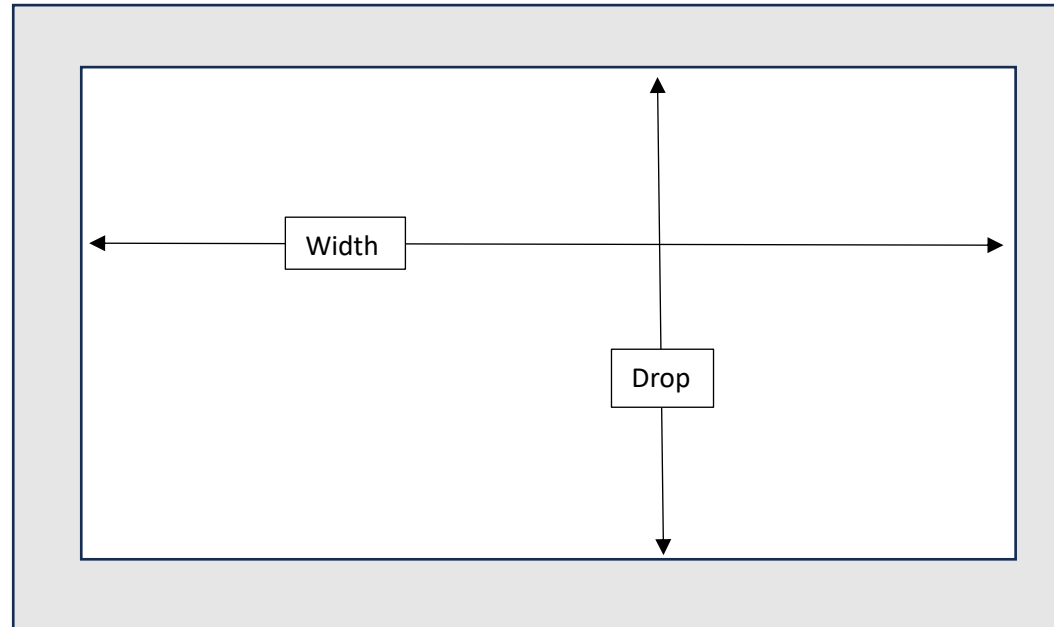

First measure the **Width** in **3 places**, record the smallest Width in the width box on the order form.

Measure the **Drop** in **3 places**, record the smallest Drop in the drop box on the order form.

****Important**** when entering your sizes into the 'Exact width and Exact drop' boxes, be sure to add the word **RECESS** after the inputted size. We will make a small deduction to allow for clearance.